

Configuration

- [Connecting an external audio device to MERGING+NADAC](#)
- [Install the MERGING+NADAC ASIO driver on Windows](#)
- [Install the MERGING+NADAC CoreAudio driver on MacOS](#)
- [MERGING+NADAC DC power input](#)
- [Install the Merging Audio Device driver for MERGING+NADAC on Windows.](#)
- [Update to the Merging Audio Device driver for MERGING+NADAC on Windows.](#)
- [MERGING+NADAC and Merging Audio Device WDM configuration.](#)