

Horus / Hapi / Hapi MkII modules serials table

Horus / Hapi / Hapi MkII

Modules serial number reference table, the serial number can be viewed from the device display or the web access page (setup>modules>modules name)

Prefix	Serial number	Item number	
AP/AS	80001 – 80600 (run 1 - 5)	IOM-HORUS-AD8(P)	AD8, no DirectOut
ADP/ADS	80600 – 81882 (run 6 - 11)	IOM-HORUS-AD8D(P)	AD8, with DirectOut
ADP/ADS (AKD8D)	85001 – 86100 (run 12 – 16)	IOM-H-AKD8D(P)	AKD8, with DirectOut
ADP/ADS (AKD8Dv2)	87001 – xxx (run 1 - xx)	IOM-H-AKD8D(S/P)	AKD8v2, with DirectOUT

Prefix	Serial number	Item number	
DP/DS	80001 – 81xxx (run 1 - 6)	IOM-H-DA8(P)	ES9008
DP/DS	85001 – 86xxx (run 7 - xx)	IOM-H-DA8(P)	ES9028

Prefix	Serial number	Item number		
AA	80001 – 80851 (run 1 - 5)	IOM-H-ADA8	ADA8	ES9016
AAP/AAS	85001 – 8xxxx (run 1 - xx)	IOM-H-ADA8(P/S)	ADA8v2	ES9026

HARDWARE

Device	Serial number
Horus	H80xxx
Hapi	H90xxx
Hapi MkII	H95xxx
Nadac	100xxx
Nadac Power	P11xxx
Nadac Clock	C12xxx
Anubis Pro	A600xxx
Anubis Premium	A650xxx
Anubis Pro SPS	A610xxx
Anubis Premium SPS	A660xxx

SOFTWARE

Name	Serial number
Safenet (USB dongle)	500000001
Soraco (Cloud licence)	ABGI0Q0U00Q4UQ6D83HC6X1B2Z