


How to Create a new Monitor

Objective: To create a new Monitor set.

1. On your Anubis device, long push the Merging logo, to access the Anubis Home page.
2. Access the Settings page from that Home page
3. Go in the Monitors menu, then press on Create new monitor.
4. Press on the new monitor that has been created
5. Configure now your new monitor.
Refer to [Anubis User Manual](#) for details on the different settings.

You have now created a new Monitor

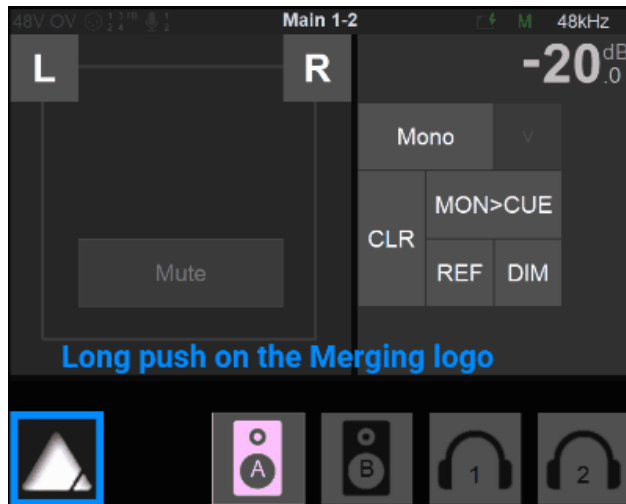

Note: Anubis ex-factory comes with some pre-configured Monitors. Users are free to create their own monitors or edit the present ones. A total of 32 Channels (at all sampling rates) are available to patch those Monitors.