


Midi Pre Amps gets reset to Digital, 0dB gain or Wrong value when changing sampling rates

If after opening a session in Pyramix when changing sampling rates, Midi Pre Amps could reset to Digital, 0dB gain or Wrong value :




You can follow this workaround :

1. Go into View > Windows / Tools > Mixer, then into Mix ! > Route
2. Disconnect Strips Inputs, Reconnect Strips Inputs :

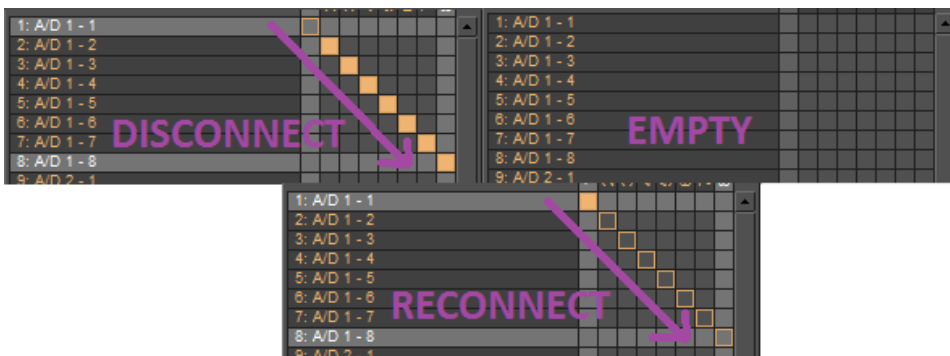

3. Pyramix Midi Preamps values should be set as into the WebApp.

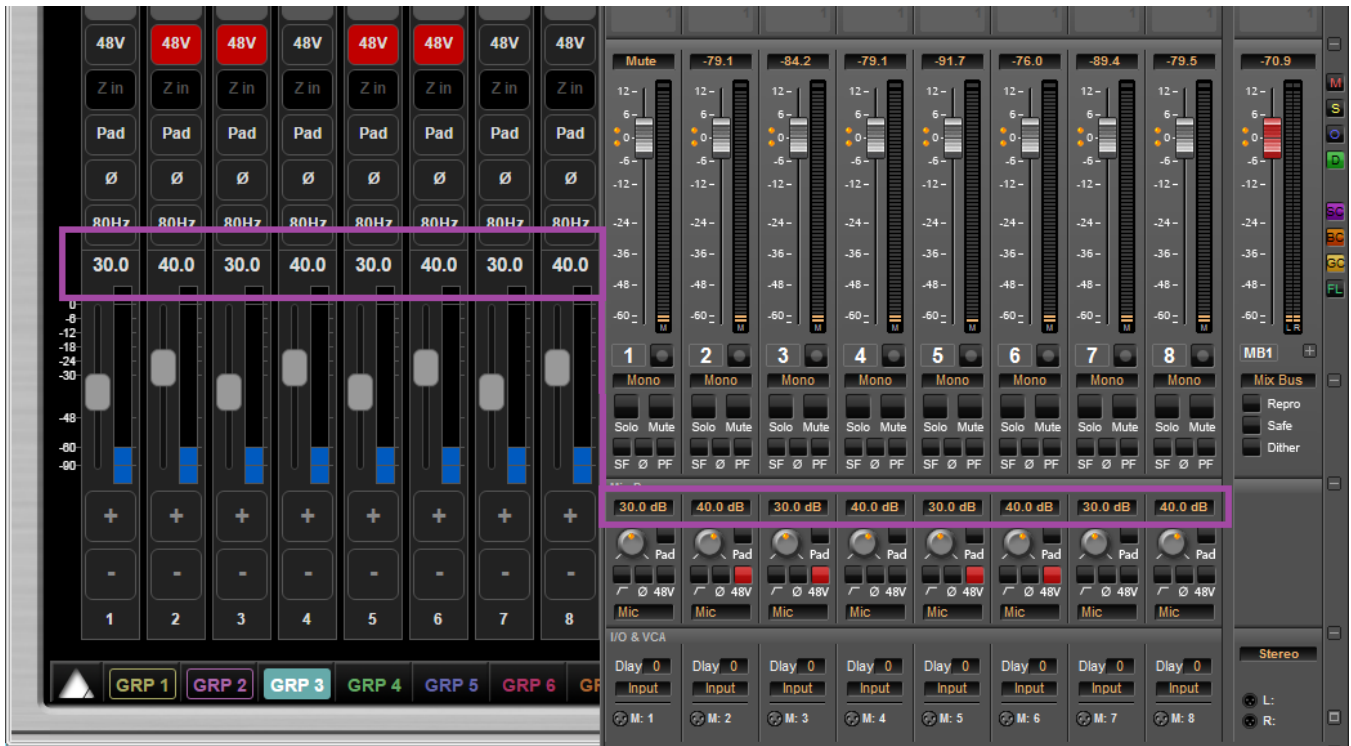

If problem persists, contact support@merging.com

Be aware that Merging is aware of this issue and do all his possible to find a fix ASAP.